

### Simple Dial Thermostat 230V



ESIMPLE-230W



ESIMPLE-230B

#### Quick Guide

Ver. 5.1

Release date: VII 2024

Soft: v2.2



Producer:  
Engo Controls sp z o.o. sp. k.  
4 Rolna St.  
43-262 Kobielice  
Poland

[www.engocontrols.com](http://www.engocontrols.com)

### Technical informations

Power supply	230V AC 50Hz
Max load	3(1) A
Temperatur control range	5 – 30°C
Control method	TPI or Hysteresis (±0.5°C)
Communication	Wired
Output signal	230V AC
IP protection class	IP30
Dimensions	80 x 80 x 26 mm

### Introduction

ESIMPLE-230W / ESIMPLE-230B is a surface-mounted, wired room thermostat intended for surface heating / cooling, characterized by high thermal inertia. The room setpoint temperature is set with a knob. Thanks to the built-in algorithms, it offers much better temperature control accuracy than traditional mechanical thermostats.

### Cechy produktu

- simple thermostat with knob
- TPI algorithm ideal for underfloor heating
- HEAT / COOL switch hidden under the knob
- two-color LED
- surface mounting

### Safety information:

Use in accordance with national and EU regulations. Use the device only as intended, keeping it in a dry condition. The product is for indoor use only. Please read the entire manual, before installation or use.

### Product Compliance

This product complies with the following EU Directives: 2014/30/EU, 2014/35/EU, 2011/65/EU.

### Installation

Installation must be performed by a qualified person with appropriate electrical qualifications, in accordance with the standards and regulations in force in a given country and in the EU. The manufacturer is not responsible for non-compliance with the instructions

### WARNING:

For the entire installation, there may be additional protection requirements, which the installer is responsible for.

### Package content



Thermostat  
white or black




Mounting screws



Quick Guide


### Proper thermostat location

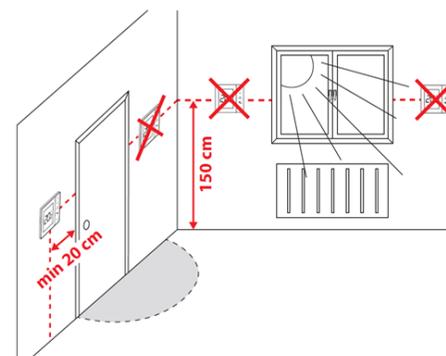


For the thermostat to work properly, it must be installed in a suitable place. Preferably approx. 150 cm above floor level, away from sources of heat or cold. In addition, the thermostat should not be installed behind curtains or other obstacles or in places with high humidity, as this will prevent an accurate measurement of the temperature in the room. It is not recommended to install the thermostat on an outside wall, in a draft or in a place where it will be exposed to direct sunlight.

### Wiring diagrams


#### a) Connection diagram for pump/actuator

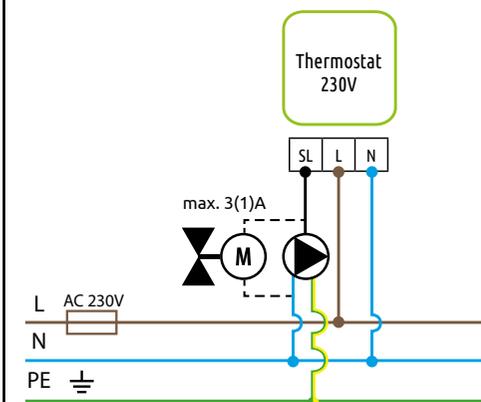

#### b) Connection diagrams for the control box

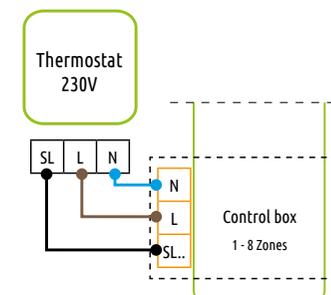

### Dimensions

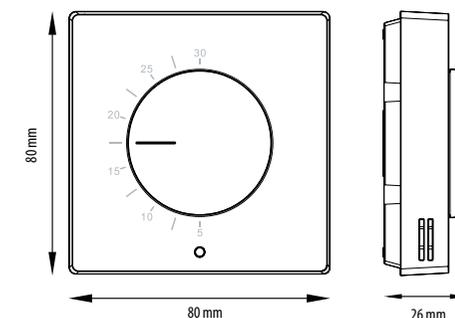


## Wall mounting

### Please note!

During wire connections procedure, please make sure they are not connected to the 230V AC power supply.




Take off the knob.

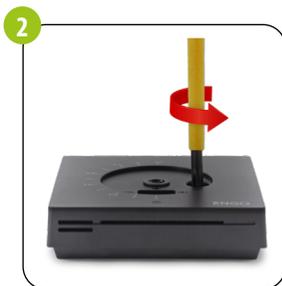

Unscrew the screw placed under the knob.



Take off the front cover of the thermostat, as shown in the picture. Connect the thermostat as shown in the connection diagram above (see blue arrow). Then attach it to the wall using the supplied mounting screws through the holes provided (see red arrows).

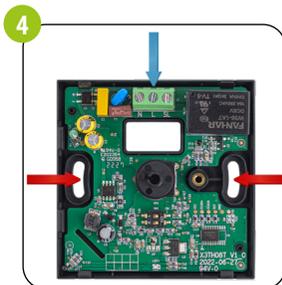

Put the front cover back in place and screw both parts together. Insert the knob paying attention to the attachment method. Thermostat is ready to use. You can set the temperature using the knob.

## Switches (sliders) for additional settings



Additional functions of the thermostats can be switched on or off by switches, which are located on the front cover, under the knob. Refer to the table below to understand what these features are:

Upper slider*	Function	Slider position
HEAT	Heating mode	<input type="checkbox"/>
COOL	Cooling mode	<input checked="" type="checkbox"/>
Bottom slider**	Function	Slider position
SPAN	Hysteresis ( $\pm 0.5^{\circ}\text{C}$ )	<input type="checkbox"/>
TPI	TPI Algorithm	<input checked="" type="checkbox"/>

### Selecting the heating or cooling mode\*

The heating or cooling mode is based on the setting of the switches (sliders), which are located under the knob on the front cover. The position of the HEAT slider indicates the heating mode. When heating is required, a red LED lights up and the thermostat gives a voltage of 230V at the SL output.

The position of the COOL slider indicates the cooling mode. When cooling is required, a blue LED lights up and the thermostat gives 230V at the SL output. When the thermostat is not in work mode, the LEDs are turned off.

### Operation algorithm selection\*\*

The thermostat gives a possibility to choose the mode of controlling the room temperature by TPI algorithm or by hysteresis  $\pm 0.5^{\circ}\text{C}$ . The TPI algorithm is designed for underfloor heating (for heating systems with high inertia) – to precisely maintain the room temperature.

## LED light indications

The status of the thermostat is determined by the LED, illuminating in the following colors:



- red



- blue

A detailed explanation of the meaning of the LED lights can be found in the table below:

LED DIODE	EXPLANATION
<b>Solid red</b>	Thermostat sends a signal for heating (the thermostat gives 230V at the SL output).
<b>Solid blue</b>	Thermostat sends a signal for cooling (the thermostat gives 230V at the SL output).
<b>Off</b>	Temperature has been reached or no power supply.